

EN 16510
BlmSchV Stufe 2
Regensburger BStV / Aachener BStV / Munchener BStV
ART.15a B-VG / Klimafonds / LRV
5 stelle DM.186 / Conto Termico 2.0



BAFA
Bundesamt für Wirtschaft
und Ausfuhrkontrolle


(Max) nominal heat output	12.1 kW
(Max) nominal heat output (H ₂ O)	9.4 kW
Minimum heat output	3.8 kW
Minimum heat output (H ₂ O)	2.6 kW
Efficiency at Max	90.2 %
Efficiency at Min	93.1 %
Energy Efficiency Class (A++ / G scale)	A+
Energy Efficiency Index (EEI)	127 %
Seasonal space heating energy efficiency (η _s)	87 %
Temperature of exhaust smoke at Max	195 °C ***
Temperature of exhaust smoke at Min	101 °C ***
PM / OGC / NOx at Max (13% O ₂)	10 / 1 / 98 mg/Nm ³
PM / OGC / NOx at Min (13% O ₂)	10 / 1 / 89 mg/Nm ³
CO at 13% O ₂ at Min and at Max	0.016 / 0.008 %
CO ₂ at Min and at Max	6.2 / 11.9 %
Boiler liters content	14 l
Maximum operating pressure	2 bar / 200 kPa
Recommended draught at Max power	10 Pa ****
Minimum draught allowed for minimum power	2 Pa ****
Mass of smoke at Min and at Max	4.7 / 8.3 g/sec
Hopper capacity	31 l / 20 kg *
Fuel dimensions	Ø6mm L3÷40mm
Hourly consumption at Min and at Max	0.9 / 2.8 kg/h *
Autonomy at Min and at Max	23 / 7 h *
Heatable volume m3	220 / 346 / 605 **
Combustion air inlet	Ø 50 mm
Air inlet	80 cm2
Smoke outlet	Ø 80 mm
Nominal electrical power (EN 60335-1).	69 W (max 417 W)
Supply voltage and frequency	230 Volt / 50 Hz
Net weight	137 kg
Distance from combustible material (back/side/under)	200 / 200 / 0 mm
Distance from combustible material (front/ceiling)	750 / 1000 mm

* Data that may vary depending on the type of pellets used.

**Heatable volume based on the requested power per m3 (respectively 55-35-20 W/m3)

*** Flue gas temperature at the appliance outlet, to be used in the chimney sizing calculation (according to EN 13384-1)

**** Consider a minimum draught of 2 Pa in the EN 13384-1 chimney dimensioning calculations

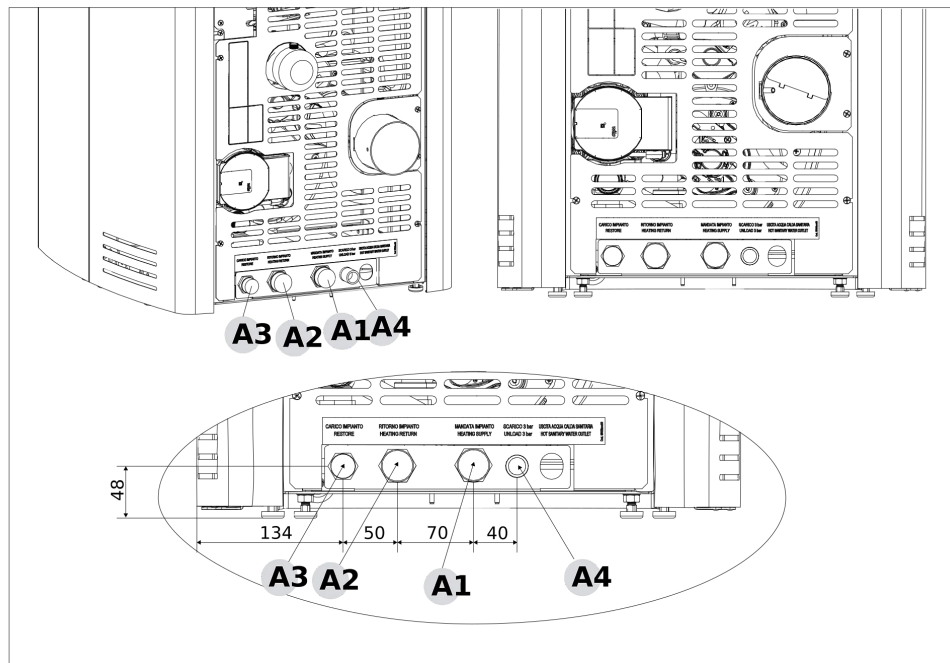

A1 = Heating water delivery
 A2 = Heating water return
 A3 = System filling / Domestic cold water inlet
 A4 = System outlet
 A5 = Domestic hot water outlet



It is strongly recommended to wash the entire system before connecting it in order to get rid of residues and deposits. Always install shutters in the system leading to the stove so as to disconnect it from the hydraulic system should it be necessary to move it, or when it requires routine and/or special maintenance. Connect the stove using flexible pipes so that the stove is not excessively constrained to the system, and to allow slight movements.